


VPM-1 Visitation Power Module

VISITATION BOOTH

VISITATION BOOTH

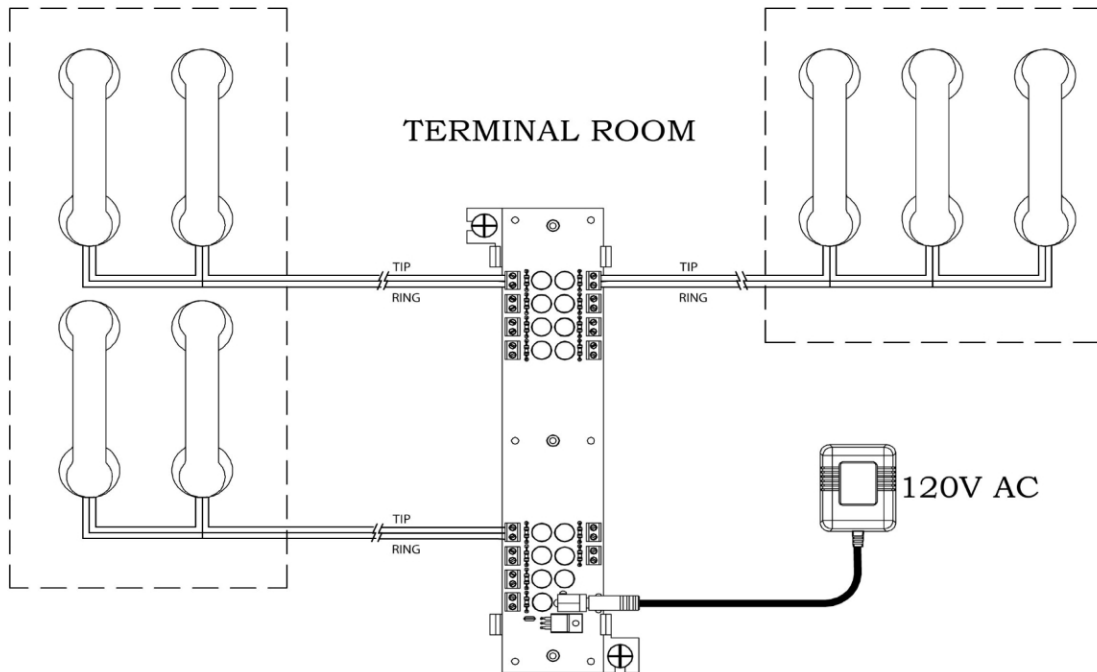

Terminal Room

1. Mount VPM-1 with reasonable access to AC outlet.
2. Connect wires to VPM as shown in drawing.
 - a) One tip & ring terminal connection can support two or three Wintel visitation kits.
 - b) Visitation kits can be the handset version, network (Rev. 2.3) w/o keypad version, and keypad version.
 - c) Power Supply can power complete Wintel Telephones (equipped with Rev. 2.3 Board).
3. Repeat Step 2 for each Visitation Set to be installed.
4. Apply power with included wall transformer.

Visitation Booth

1. Attach "Tip" to White Wire of **both** handsets in the set.
2. Attach "Ring" to Black Wire of **both** handsets in the set.
3. Repeat Steps 1-2 for remaining Visitation Sets.

Specifications

1. Current:
 - 2 Handset Sets: 28mA (14mA/Handset)
 - 3 Handset Sets: 33mA (11mA/Handset)
2. Power Supply: 9VDC, 650mA minimum recommended

- One power supply can support 14 separate location sets. (a set includes both the inmate side and the visitor side)
- No batteries needed

Wintel[®]

A Division of Independent Technologies, Inc.

1051 Bennett Drive, Suite 101 • Longwood, FL 32750
407.834.1188 • Fax 407.830.1050 • 800.264.8889
www.wintelphones.com